

125

125mm SUREFIT GUTTER SYSTEM



With Surefit strength and a volume you can trust, 125 is GOOD for large UK roof sizes. Plus you can increase the volume even more by installing the superior 82mm downpipe system.

GUTTER



	Code	Pack	£.Each
4 metre	GR640	5	42.75
	BR640	5	42.75
	VR640	5	42.75
	WR640	5	42.75

JOINT BRACKET



	Code	Pack	£.Each
	GR608	10	8.83
	BR608	10	8.83
	VR608	10	8.83
	WR608	10	8.83


SUPPORT BRACKET



	Code	Pack	£.Each
	GR610	20	3.57
	BR610	20	3.57
	VR610	20	3.57
	WR610	20	3.57

90° EXTERNAL ANGLE

See page 98 for special fabrications.



	Code	Pack	£.Each
	GR605	5	13.04
	BR605	5	13.04
	VR605	5	13.04
	WR605	5	13.04

90° INTERNAL ANGLE




	Code	Pack	£.Each
	GR615	5	13.04
	BR615	5	13.04
	VR615	5	13.04
	WR615	5	13.04

135° EXTERNAL ANGLE



	Code	Pack	£.Each
	GR607	5	13.94
	BR607	5	13.94
	VR607	5	13.94
	WR607	5	13.94

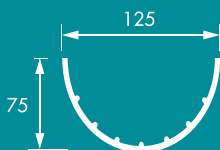

Flow Rate
Up to
4.9l/s

135° INTERNAL ANGLE



Code	Pack	£.Each
GR617	5	13.94
BR617	5	13.94
VR617	5	13.94
WR617	5	13.94

68mm RUNNING OUTLET



Code	Pack	£.Each
GR611	5	12.56
BR611	5	12.56
VR611	5	12.56
WR611	5	12.56

82mm RUNNING OUTLET



Code	Pack	£.Each
GR682	5	12.56
BR682	5	12.56
VR682	5	12.56
WR682	5	12.56

EXTERNAL STOPEND



Code	Pack	£.Each
GR613	10	6.06
BR613	10	6.06
VR613	10	6.06
WR613	10	6.06

INTERNAL STOPEND



Code	Pack	£.Each
GR602	10	3.40
BR602	10	3.40
VR602	10	3.40
WR602	10	3.40

ADAPTOR SEAL



Code	Pack	£.Each
GR600	5	9.66


Replaces standard seal. Allows connection to most deep profile systems.



GOOD TO KNOW

The slotted fixing points on 125 angles mean you can fix directly to the fascia and they can be adjusted too!

Less brackets - less fuss!

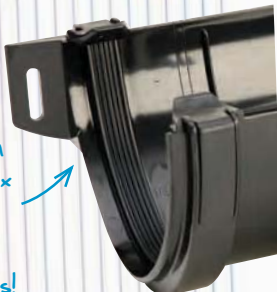

GOOD TO KNOW



125 brackets are super strong, they can hold up to 75kg!



Each product code is prefixed with a colour.

Example BR125, where 'B' = BLACK

DOWNPIPE



	Code	Pack	£.Each
2 metre	GR518	5	18.11
	BR518	5	18.11
	VR518	5	18.11
	WR518	5	18.11
2.5 metre	GR519	5	22.74
	BR519	5	22.74
	VR519	5	22.74
	WR519	5	22.74
4 metre	GR520	5	36.16
	BR520	5	36.16
	VR520	5	36.16
	WR520	5	36.16
5.5 metre	GR521	5	49.87
	BR521	5	49.87
	VR521	5	49.87
	WR521	5	49.87

BRACKET



Code	Pack	£.Each
GR019	10	4.64
BR019	10	4.64
VR019	10	4.64
WR019	10	4.64

BRACKET



Code	Pack	£.Each
GR046	10	4.52
BR046	10	4.52
VR046	10	4.52
WR046	10	4.52

CONNECTOR



Code	Pack	£.Each
GR017	10	5.10
BR017	10	5.10
VR017	10	5.10
WR017	10	5.10

92½° BEND



Code	Pack	£.Each
GR577	10	9.99
BR577	10	9.99
VR577	10	9.99
WR577	10	9.99

112½° OFFSET BEND



Code	Pack	£.Each
GR020	10	7.58
BR020	10	7.58
VR020	10	7.58
WR020	10	7.58

SHOE



Code	Pack	£.Each
GR021	10	7.04
BR021	10	7.04
VR021	10	7.04
WR021	10	7.04

112½° BRANCH



Code	Pack	£.Each
GR022	5	20.10
BR022	5	20.10
VR022	5	20.10
WR022	5	20.10

DOWNPIPE



	Code	Pack	£.Each
4 metre	GR700	5	36.16
	BR700	5	36.16
	VR700	5	36.16
	WR700	5	36.16

BRACKET



Fix at 2m centres - max

2 screw fixing

	Code	Pack	£.Each
	GS612	10	4.70
	BS612	10	4.70
	VS612	10	4.70
	WS612	10	4.70

CONNECTOR



	Code	Pack	£.Each
	GR717	5	5.10
	BR717	5	5.10
	VR717	5	5.10
	WR717	5	5.10

112½° OFFSET BEND



	Code	Pack	£.Each
	GR720	6	7.78
	BR720	6	7.78
	VR720	6	7.78
	WR720	6	7.78

SHOE



	Code	Pack	£.Each
	GR721	5	7.04
	BR721	5	7.04
	VR721	5	7.04
	WR721	5	7.04

112½° BRANCH



	Code	Pack	£.Each
	GR722	5	21.71
	BR722	5	21.71
	VR722	5	21.71
	WR722	5	21.71

REDUCER



82mm Spigot to 68mm Socket.

	Code	Pack	£.Each
	GR004	5	7.43

GOOD TIP

Replace your 68mm downpipe with 82mm (using the R682) to drain bigger roofs with fewer outlets

JOBS A GOOD'UN™

GOOD TO KNOW

ACCESSORIES/SPARES AVAILABLE

Rise & Fall Brackets p37
Spare Seals p38

GREY BLACK BROWN WHITE

G

B

V

W

Each product code is prefixed with a colour.

Example BR125, where 'B' = BLACK